


# Accessories


## Teach Adapter

### For LTX Linear Position Sensors

### RP-Q21

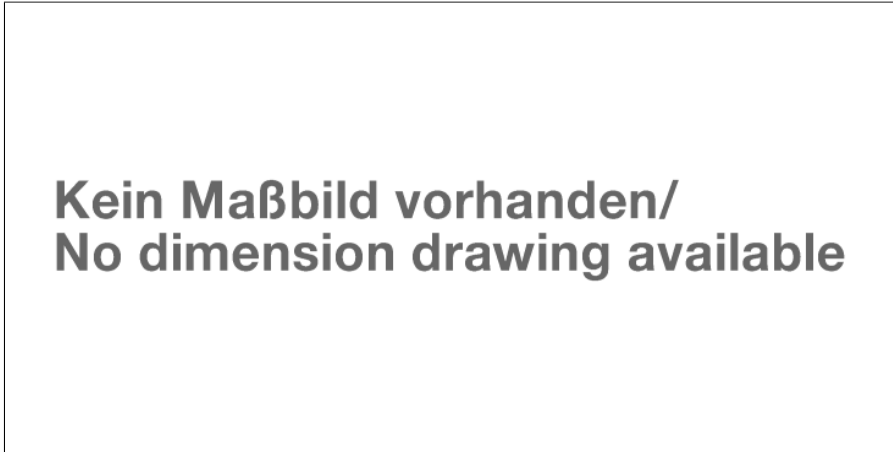

- Teach adapter
- To program the measuring range of the analog LTX linear position sensors in rod design

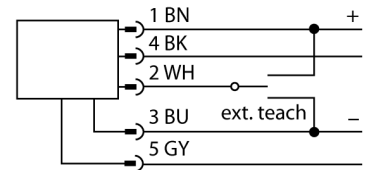

**Functional principle**

Connect the teach adapter between sensor and connection cable. Use the DIP switch to set the lower and upper limit of the measuring range. The sensor is thus easily adjusted to any application.

Type	RP-Q21
ID	6900005
Dimensions	82.6 x 34.8 x 20.8 mm