


BIM-UNT-AY1X/S1139 7M Magnetic Field Sensor – For Pneumatic Cylinders

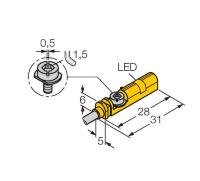


Technical data

	Туре	BIM-UNT-AY1X/S1139 7M
I	D	4685764
ę	Special version	S1139 corresponds to: Long overtravel
(General data	
F	Pass speed	≤ 10 m/s
F	Repeatability	≤ ± 0.1 mm
٦	Temperature drift	≤ 0.1 mm
ŀ	Hysteresis	≤ 1 mm
E	Electrical data	
(Output function	2-wire, NAMUR
ę	Switching frequency	1 kHz
\	Voltage	Nom. 8.2 VDC
(Current consumption non-actuated	≤ 1.2 mA
4	Actuated current consumption	≥ 2.1 mA
4	Approval acc. to	KIWA 16 ATEX 0051 X
I	nternal capacitance (C _i)/inductance (L _i)	180 nF/350 μH
[Device marking	Ex II 1 G Ex ia IIC T6 Ga/II 1 D Ex ia IIIC T95 °C Da
		(max. $U_i = 20 V$, $I_i = 60 mA$, $P_i = 80 mW$)
ſ	Mechanical data	
[Design	Rectangular, UNT
[Dimensions	28 x 5 x 6 mm
ŀ	Housing material	Plastic, PP
4	Active area material	Plastic, PP
٦	Fightening torque fixing screw	0.4 Nm
E	Electrical connection	Cable
(Cable quality	Ø 3 mm, Blue, Lif9YYW, PVC, 7 m

Features

- For T-groove cylinders without mounting accessories
- Optional accessories for mounting on other cylinder designs
- One-hand mounting possible
- Stable mounting
- Magneto-resistive sensor
- Long overtravel
- For large cylinders
- DC 2-wire, nom. 8.2 VDC
- Output acc. to DIN EN 60947-5-6 (NAMUR)
- Output with binary signal
- NO contact
 - Cable connection
- ATEX category II 1 G, Ex Zone 0
- ATEX category II 1 D, Ex Zone 20

 Wiring diagram



Functional principle

Magnetic field sensors are activated by magnetic fields and are especially suited for piston position detection in pneumatic cylinders. Based on the fact that magnetic fields can permeate non-magnetizable metals, it is possible to detect a permanent magnet attached to the piston through the aluminium wall of the cylinder.




Technical data

Core cross-section	2 x 0.14 mm ²
Environmental conditions	
Ambient temperature	-25+70 °C
Vibration resistance	55 Hz (1 mm)
Shock resistance	30 g (11 ms)
Protection class	IP68
MTTF	2283 years acc. to SN 29500 (Ed. 99) 40 °C
Mounting on the following profiles	
Cylindrical design	
Switching state	LED, Yellow
Included in delivery	cable clip

Mounting instructions


Mounting instructions/Description

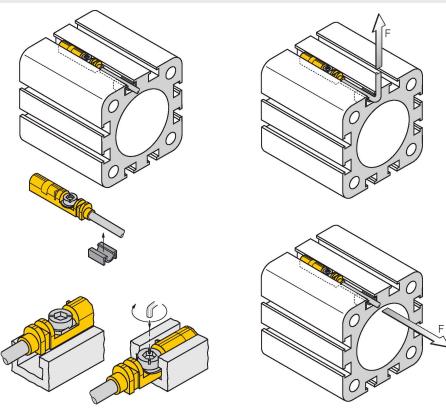

Thanks to the mounting lip, the sensor can be inserted into the groove from above with one hand. Mount the sensors as follows using the patented wing screw: The wing screw and the female thread feature a lefthand thread. Two small plastic lips keep the screw in position, ready-to-install. Turn the screw clockwise. The screw moves out of the thread and hits the upper grooves with the wings. The sensor is thus pressed down and locked in position. A few degrees up to approximately 1.5 turns of the screw with a slotted screwdriver (blade width 0.5 mm) or a 1.5 mm Allen key are sufficient to ensure vibration-proof fastening, depending on the shape of the slot. A tightening torque of 0.4 Nm is sufficient for safe mounting without damaging the cylinder. The sensor can now withstand an axial and radial tensile load of F=100N applied on the cable. A cable clip is included in the scope of delivery. It enables smooth cable routing in the groove and ensures that the cable is fastened as securely as possible. The corresponding accessories for mounting on other cylindrical housings must be ordered separately.




Accessories

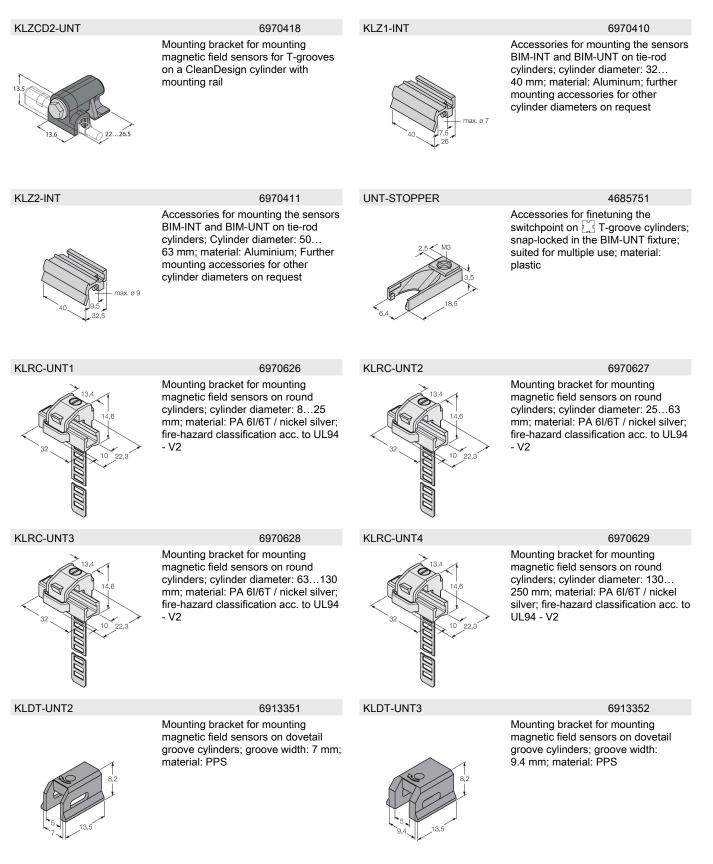




KLDT-UNT6

 6913355



Mounting bracket for mounting magnetic field sensors on dovetail groove cylinders; groove width: 7.35 mm; material: PPS

Accessories

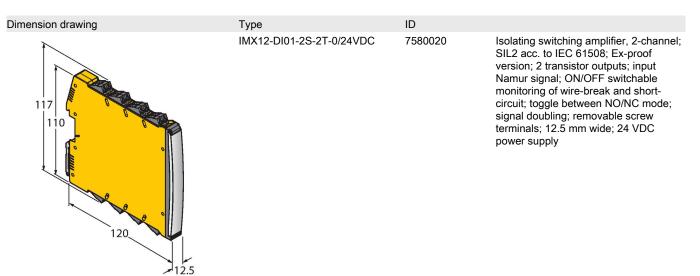



Instructions for use

Intended use	This device fulfills the directive 2014/34/EC and is suit- ed for use in potentially explosive areas according to EN60079-0:2012, +A11:2013, -11:2012.In order to ensure that the device is operated as intended, the national regulations and directives must be observed.
For use in explosion hazardous areas conform to classification	II 1 G and II 1 D (Group II, Category 1 G, electrical equipment for gaseous atmospheres and category 1 D, electrical equip- ment for dust atmospheres).
Marking (see device or technical data sheet)	Ex II 1 G and Ex ia IIC T6 Ga and Ex II 1 D Ex ia IIIC T95 °C Da acc. to EN60079-0, +A11 and -11
Local admissible ambient temperature	-25+70 °C
Installation/Commissioning	These devices may only be installed, connected and oper- ated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas.Please verify that the classification and the marking on the device comply with the actual application con- ditions.
	This device is only suited for connection to approved Exi cir- cuits according to EN 60079-0 and EN 60079-11. Please ob- serve the maximum admissible electrical values. After con- nection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electri- cal equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14).
Installation and mounting instructions	Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device. If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields. The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet. In order to avoid contamination of the device, please re- move possible blanking plugs of the cable glands or connec- tors only shortly before inserting the cable or opening the ca- ble socket.
Service/Maintenance	Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.